

# PS-010V-D-96-24 Basics Power Supply - Installation Instructions

Model PS-010V-D-96-24

**Please read all instructions prior to installation and keep for future reference!**

This power supply is to be installed in accordance with Article 450 of the National Electrical Code. The power supply must be installed in a well ventilated area and free from explosive gases and vapors. Proper operation requires the free flow of air. As this power supply is hardwired, it should be installed by a qualified electrician. UL class 2 recognized




REVO.4  
03112024

1 / 2

**B**basics  
by luminii


7777 Merrimac Ave  
Niles, IL 60714  
T 224.333.6033  
F 224.757.7557  
info@luminii.com  
www.luminii.com

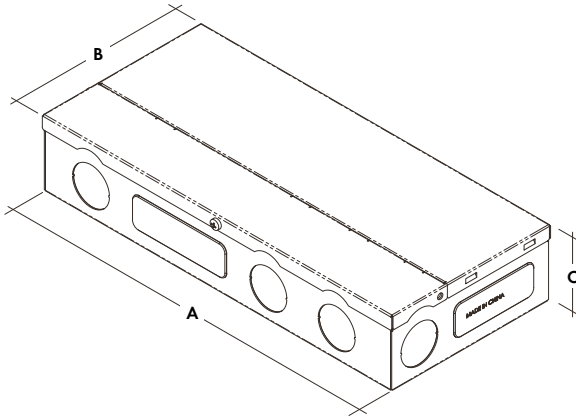

MODELS	PS-010V-D-96-24
MAX Load	96 watts
A. Length	8.29"
B. Width	4.10"
C. Depth	1.59"
Net Weight	2.20 lbs


**1**

Before installing, check the label and ensure the power supply has the proper input voltage, output voltage, and wattage for the job. Check the wire markings to ensure they match the wiring diagram below. Refer to table above for the maximum loads!

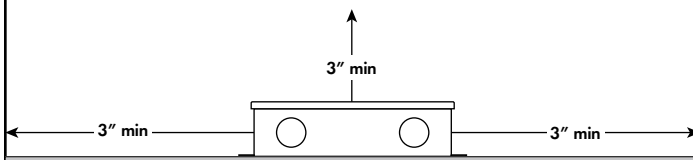


**1.1** Power supply can be mounted vertically or horizontally. With a minimum of 3" clearance around power supply to provide proper air circulation.

**2**

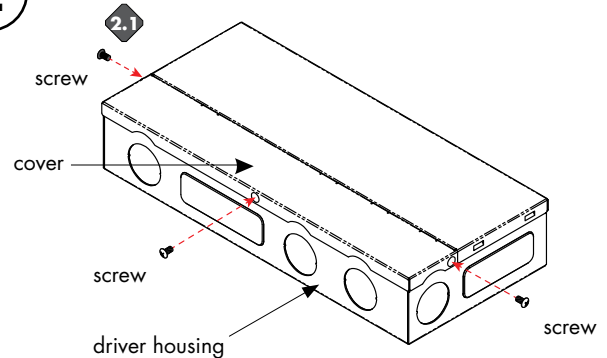

**2.1** Remove the three Phillips screws from the top of the driver housing and pull the cover off to expose the driver wires.

**3**

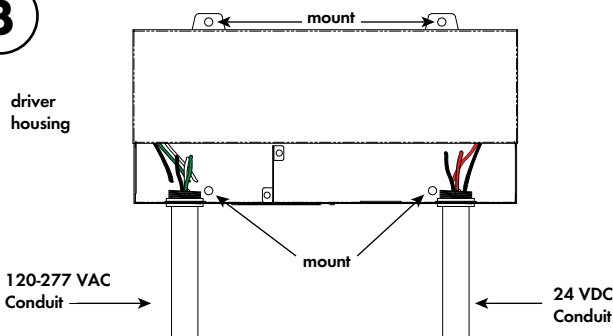

**3.1** Insert the 120-277 VAC power into the driver housing from the electrical panel. Followed by bringing the 24V DC low voltage wires from the LEDs into the driver housing. Refer to diagram on page 2 to make all the proper wiring connections.

# PS-010V-D-96-24 Basics Power Supply - Installation Instructions

Model PS-010V-D-96-24

**Please read all instructions prior to installation and keep for future reference!**

This power supply is to be installed in accordance with Article 450 of the National Electrical Code. The power supply must be installed in a well ventilated area and free from explosive gases and vapors. Proper operation requires the free flow of air. As this power supply is hardwired, it should be installed by a qualified electrician. UL class 2 recognized



REVO.4  
03112024

2 / 2

**B**basics  
by luminii

7777 Merrimac Ave  
Niles, IL 60714  
T 224.333.6033  
F 224.757.7557  
info@luminii.com  
www.luminii.com

