

KRS, KRM, KRL & KRXL Channel - Installation Instructions

Models KRSC-XX, KRMC-XX, KRLC-XX, & KRXLC-XX



7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Please read all instructions prior to installation and keep for future reference!

1. Product to be installed by a qualified electrician.
2. Prior to installation ensure power is off at fuse box to prevent electrical shock.

1

extrusion with lens
1.1
miter saw

Caution: Safety equipment is recommended, when modifications are being made to the extrusion & lens.

1.1 If necessary extrusion & lens can be cut in the field. Using the proper blade for aluminum, cut to the desired length.

2

wire leads
extrusion
LineLED
cut
solder pads
2.1

2.1 LineLED can be shortened by cutting along the dashed lines in between the solder pads. Make sure the cut is made on the side of the LineLED without the wire leads. LineLED cannot touch the metal endcap which will shorten the circuit.

3

3.1 Mounting bracket are recommended and vary depending on the installation. Reference illustrations below, to determine what bracket is best.

3.1 **hard surface mounting bracket,**
such as wood, stone, tile

3.1 **soft surface mounting bracket,**
such as drywall, plaster

4

4.1 Insert & slide each mounting bracket through the extrusion end. Spread them out evenly, referencing diagram below.

hard surface mounting bracket
4.1
soft surface mounting bracket

5

router
surface

Channel Model	Slot Width	Slot Depth	Channel Width	Channel Height
KRS Channel	0.69"	0.36"	1.00"	0.42"
KRM Channel	0.69"	0.55"	1.00"	0.61"
KRL Channel	0.83"	0.36"	1.21"	0.42"
KRXL Channel	0.83"	0.55"	1.21"	0.61"

dimensions not including mounting bracket

5.1 If necessary route slots on surface with the proper width and depth to accommodate aluminum extrusion (reference step 7 for slot width).

mounting bracket locations

4"
4"
every 30"
every 30"

hard surface mounting bracket,
such as wood, stone, tile

soft surface mounting bracket,
such as drywall, plaster

KRS, KRM, KRL & KRXL Channel - Installation Instructions

Models KRSC-XX, KRMC-XX, KRLC-XX, & KRXL-XX



7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Please read all instructions prior to installation and keep for future reference!

1. Product to be installed by a qualified electrician.
2. Prior to installation ensure power is off at fuse box to prevent electrical shock.

6

feed the LineLED wires through the opening in endcap

remove the paper backing from the adhesive tape LineLED before installing onto the extrusion

6.1

6.1 Gently press LineLED strip onto the aluminum extrusion and then proceed to install the endcaps.

endcap

surface

7

0.81" for KRS & KRM
0.96" KRL & KRXL

cutout slot

hard surface mounting bracket

7.1

7.1 For hard surface mounting bracket: Align the extrusion mounting brackets to the slot, then carefully push the extrusion completely inside to secure.

7.1 For soft surface mounting bracket: Bend the adjustable spring to the a straight position, follow by pushing the extrusion completely inside the slot. Then release the springs to secure.

mounting bracket

extrusion

0.81" for KRS & KRM
0.96" KRL & KRXL

cutout slot

soft surface mounting bracket

7.1

spring bracket

8

8.1

8.1 Remove the protective film from the diffuser lens. Snap the diffuser lens into the aluminum extrusion.

8.2 If installing facing up in wet locations, apply silicone to the edges of the endcaps. Followed by applying silicone to the edge between the lens and extrusion, make sure to clean off any excess silicone.

extrusion

lens

9

9.1

9.1 Ensure the correct (wattage & voltage) power supply is used to power LineLED. Then proceed to connect LineLED wires from extrusion to power supply. For more information please refer to power supply and LineLED wiring instructions.

class II power supply

LineLED of extrusion

line voltage wires

low voltage wires